

Installation Guide - Acoustic Slat Panels




Measure your wall




Mark your acoustic panel




Cut felt with a utility knife

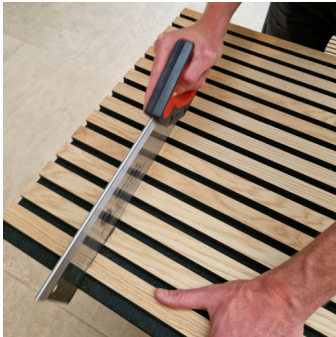


Cut slats with a fine-toothed hand saw

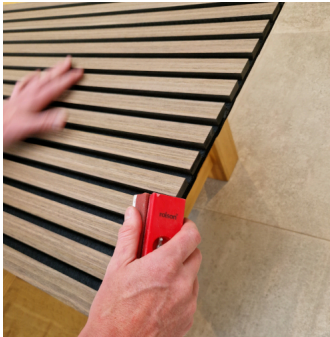

Lightly sand any cut edges

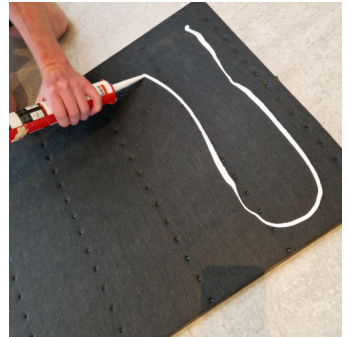

Apply adhesive to rear of panel

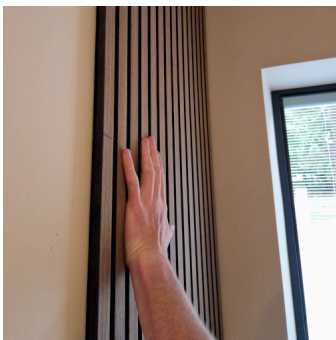

Apply firm pressure for several minutes


Enjoy Your New Space

